





Download the "Fauna" app now.

Fauna overview

Quick User Guide

Welcome to Fauna - your audio glasses!

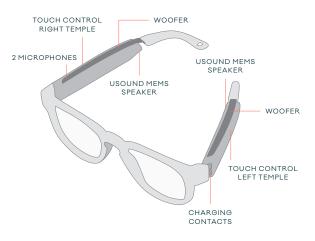

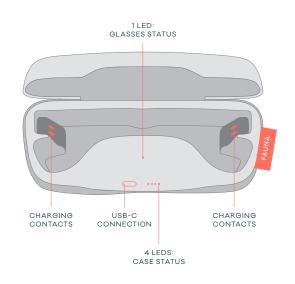

First steps

 $\binom{1}{2}$

Activate

Prior to first use, peel the plastic protector off the charging contacts and place the glasses back in the case. Once the contacts are successfully connected, the LED "glasses status" will light up. Close the case and reopen it. Fauna has now been activated and you will hear: "Hi! Fauna is on". Once activated, Fauna is always ready to use.

*


Connect

Place the glasses in the case and close the lid. Open the lid again, activate Bluetooth on your mobile device and search for Fauna. The connection is confirmed with "Great, Fauna is connected." If you hear "Please try pairing again," repeat the procedure. With known devices, Fauna connects automatically.

4

Charge

If the battery charge is below 30 %, Fauna warns you: "Battery low, please charge your Fauna". To charge your Fauna, put it in the case making sure that the pins are connected. Close the lid to start the charging process. To indicate your Fauna is connected correctly, after closing the case, the left-most and right-most of the 4 "case status" LEDs will light up for 5 seconds. The Fauna case serves as charging station.

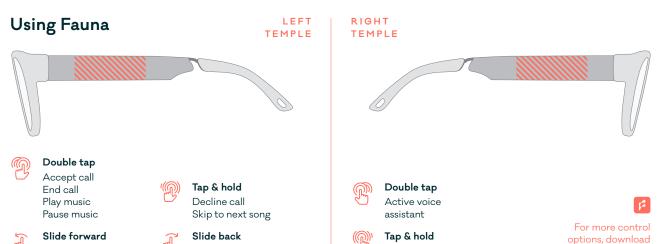

Volume down

U Volume up



the "Fauna" app.

More about your Fauna

Important information

The pairing with a device can be forced: tap and hold on the right temple, then connect the output device to Fauna via Bluetooth.

Fauna is only splash-proof. Please do not keep it under running water.

Adjustments of frame, length of the temple and lenses can be made by an optician. Please leave this to a professional.

Fauna can only be recharged in the case. Please do not charge any other way.

Charging the glasses

The "glasses status" LED in the Fauna case indicates the status of the glasses. This LED flashes yellow (low charge level) or green (charge level above 30%) if the contacts are connected properly. At 100% charge, the LED glows green for 10 seconds after opening the case.

Charging the case

The 4 LEDs on the outside show the battery status of the Fauna case. When the case is charged via USB-C cable, they will flash. If they glow continuously, the Fauna case is completely charged.

LED glasses status	LED case status
less than 30%: flashes yellow less than 100%: flashes green	less than 25% less than 50% less than 75%
– 100 % charged: lights up green 10 sec.	100% charged

Find more information and a detailed manual in different languages at: www.wearfauna.com/manual

\geq

Instructions for opticians

Please follow these instructions to avoid any damage.

Cut off the description and take it with you to the glasses adjustment. Fauna is suitable for prescription lenses.

Attention: Fauna contains electronics.

1. Indications for use

Fauna audio glasses are portable, Bluetooth 5.O-linked audio devices in the form of sunglasses or blue-light protection glasses. Fauna audio glasses lenses are not prescription correction lenses, however such can be retrofitted by an optician only. The frame is made out of a cetate material. The glasses temple is made out of a plastic, metal and acetate combination. It allows a temple length adjustment, which should be done by an optician only.

The product can be used to listen to music, podcasts or other audio sources; for telephone calls and for interactions with audio assistants on the user's smartphone, smartwatch or any ©2020 Fauna Audio GmbH Kratkystrasse 2, 8020 Graz, Austria **hello@wearfauna.com, wearfauna.com**

Do not reproduce, modify, a distribute or otherwise use om without prior permission.

other Bluetooth-enabled device. The glasses are sold with a dedicated charging case. Use only the provided charging case for recharging the battery of the glasses.

Safety warnings

In general, please remember to:

- Read these instructions.
 Heed all warnings.
 - Keep these instructions. Follow all instructions.



2. User safety

- In order to avoid hearing damage, you should not use our glasses at high volume over a longer period of time. Use them reasonably at a moderate volume level.
- Do not use the glasses if they emit any loud unusual noise. If this happens, stop using the device and contact customer service: support@wearfauna.com
- Remove the glasses immediately if you experience an unusual warming sensation or loss of audio.
- Contains small parts which may be a choking hazard. This product is not suitable for children under the age of 3.
- This product contains magnetic material. Seek medicaladvice on whether this might affect your implantable medical device.
- Do not use if package is damaged upon delivery.
- The lenses should be exchanged by an optician only.
- The adjustment of the temple length should be done by an optician only.
- Be cautious as use of the glasses might distract you, especially when driving.
- Follow applicable laws, especially on the use of mobile phones or other devices whilst driving. Never forget to care about your own safety and the safety of others when you are wearing our glasses and listening to your preferred content while engaging in activities requiring your attention.
- Never forget about your environment. Adjust the volume to ensure you can hear your surroundings, for example warning signals.
- Tinted glasses are not recommended to be worn for night driving.

3. Product safety

- Keep the glasses and the charging case away from fire and heat sources. Avoid storage in direct sunlight. Do not place open flame sources, such as lighted candles, on or near the product.
- After each use, wipe both sides of the lenses and all parts of the glasses with the cloth provided or a dry cloth.
- Do not try to alter or modify the product. This will affect the warranty of the product and lead to technical failure of the product. The compliance with the below-mentioned standards will not be guaranteed anymore.
- Do not bend the temples of the glasses as this can damage the electronics inside.
- Avoid closing the sound openings of the glasses or inserting sharp objects because the sound quality will be degraded and the warranty voided.
- Use only the provided product charging case for recharging the battery of the glasses.
- Do not use mobile phone adapters to connect the charging

case to airplane seat jacks as this could result in injury or property damage due to overheating.

- Use it only with an approved power supply compliant with regulatory requirements.
- Only use products/attachments/accessories specified by the manufacturer.
- Unplug the charging case during lightning storms or when unused for long periods of time.
- The charging case and glasses must not be exposed to direct sunlight for a prolonged period as this can damage the battery.
- During transport, store the glasses in the provided charging case to avoid unnecessary scratches on the product.
- The glasses can only be used within a temperature range of -10°C to +40°C, otherwise functionality of the product can not be guaranteed.
- Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as if the power supply cord or plug is damaged, objects have fallen into the apparatus, the apparatus does not operate normally or has been dropped.

4. Regulatory information

Fauna glasses and charging case have been designed and manufactured according to the highest standards. This equipment has been tested and complies with RF: (BT5.O&2.4G), EMC: (BT5.O&2.4G), EN5502O, EMF: EN62479, LVD: EN 62368-1:2014+AC:2015.

This low-power electronic device complies with EN62479 and does not cause harmful interferences to the user at any time, except for situations of violated safety constraints. Accordingly, the limit for radiation exposure is adhered to, as defined for user's health for the general population. The device has immunity against electromagnetic intereference as specified by EN55020.

Our product has the following certifications and compliances: CE \cdot FCC \cdot CCC \cdot CSA \cdot RoHS + REACH \cdot UL \cdot IP 55 \cdot WEEE The batteries in the glasses and in the charging case are in compliance with $\mathsf{IEC62133}/\mathsf{UL2O54}/\mathsf{UL1642}.$

DON'T attempt to remove the rechargeable lithium-ion battery from the product.

The product is designed to block more than 99% UVA and UVB light energy. This product is in compliance with ANSI Z80.3-2018 and AS/NZS 1067.1:2016.

Lenses meet applicable government impact resistance requirements but **ARE NOT SHATTERPROOF**!

5. Manufacturer/distributor

Manufactured for USound GmbH

Designed and developed by USound GmbH for Fauna Audio GmbH, Kratkystrasse 2, 8020 Graz, Austria.

Powered by USound MEMS Speaker Technology.

USound and Fauna are trademarks of USound GmbH and Fauna Audio GmbH, Kratkystrasse 2, 8020 Graz, Austria.

6. Customer registration

Please complete and retain for your records. The serial and model numbers are located on the inner part of the temple and at the bottom of the charging case.

Serial number:

Model number:

Please keep your receipt with your quick start guide for potential warranty issues. Now is a good time to register your Fauna product to get the most out of it. You can easily do this by going to: **wearfauna.com/en/terms-of-trade**/

7. Fauna warranty information

This product is covered by a warranty from Fauna Audio GmbH. The warranty period is two years upon delivery of the product. You can find our complete legal terms of trade here: wearfauna.com/en/terms-of-trade/

For any warranty claims or returns, please use our form in the FAQ section of our website and send it, filled out and signed, to **support@wearfauna.com**.

8. Logos and trademarks

Bluetooth and the Bluetooth logos are registered trademarks of Bluetooth SIG, Inc., and any use of such trademarks is under license.

Apple and the Apple logo are trademarks of Apple Inc. App Store is a service mark of Apple Inc.

Google Play and the Google Play logo are trademarks of Google LLC.

Fauna and USound are trademarks of USound GmbH and Fauna Audio GmbH.

